

Stud Wall Foam Kit

311071E

EN

To spray wall insulation foam into stud walls with a single pass. For professional use only.

 




Important Safety Instructions

Read all warnings and instructions in this manual and in the Fusion AP and Fusion PC Spray Gun manuals before using the equipment. Save all instructions.

249421, Stud Wall Foam Kit

Ref	Part	Description	Qty
1	15F240	ADAPTER, stud wall	1
2	15F854	PACKING, tip; stud wall	1
3	15F241	CAP, air; stud wall	1
4	FTM979	TIP, flat; stud wall	1

 Use with flat pattern mix chambers only. Order separately.

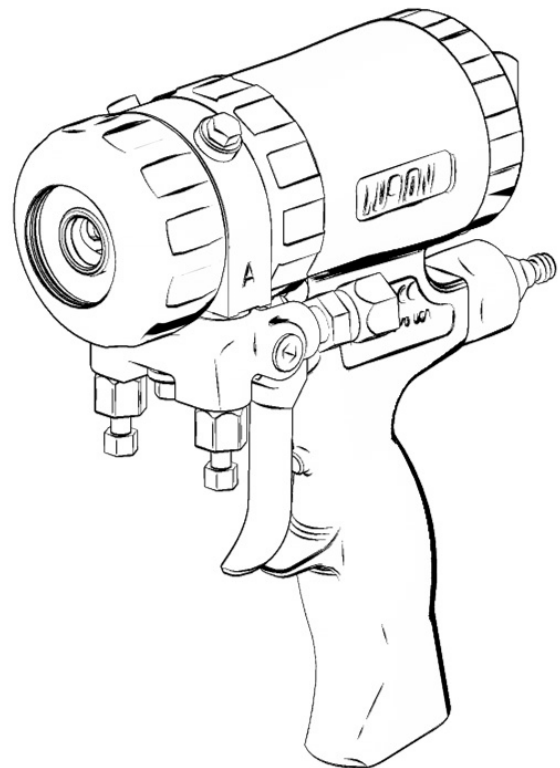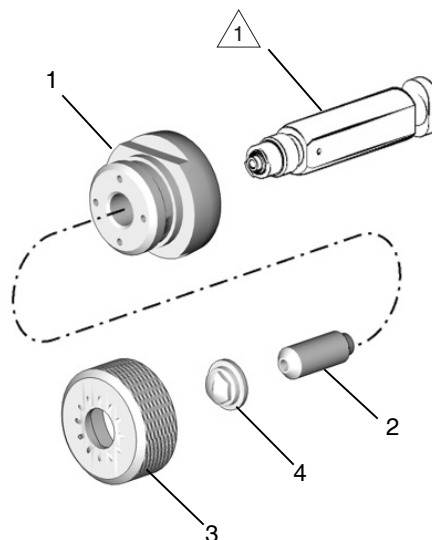

Related Manuals

Manual in English	Description
309550	Fusion AP Spray Gun Instruction Manual
3A7314	Fusion PC Spray Gun Instruction Manual

Installation

NOTE: This kit will not work with round mix chambers (i.e. ARXXXX or PCXXRD). If there is a round mix chamber in the gun, replace it with a flat mix chamber. Smaller flat mix chambers can be ordered for lower fluid flow applications. See Flat Mix Chamber Kit chart.

Flat Mix Chamber Kit*	Type	Flow Rate (approx.) at 1000 psi (7.0 MPa, 70 bar)
AF5252 / PC52FL	Standard	15 lb/min (6.81 kg/min)
AF4242 / PC42FL	Standard	11 lb/min (4.99 kg/min)
AF2929 / PC29FL	Standard	7 lb/min (3.18 kg/min)

* Includes mix chamber and cleanout tool.

NOTE: A FTM979 Stud Wall Tip is included in this kit.

NOTE: FTM762 Stud Wall Tip is available for lower fluid flow applications as an accessory.

	FTM979 Stud Wall Tip	FTM762 Stud Wall Tip
Pattern size	22 in. (559 mm)	14 in. (355.6 mm)
Spray distance	2 ft. (0.61 m)	2 ft. (0.61 m)
Fluid flow‡	15 lb/min (6.81 kg/min)	13 lb/min (5.90 kg/min)

‡ When used with mix chamber AR5252 at 1000 psi (7.0 MPa, 70 bar).

NOTE: The small plastic o-ring on the end of the flat mix chamber must be removed.

1. Remove the existing air cap (round or flat) from the Fusion Gun and replace it with the adapter (1). Thread the adapter onto the mix chamber until it bottoms out.

2. Insert the packing (2) through the center of the adapter (1) with the stepped end facing the mix chamber.
3. Place the stud wall tip (4) onto the packing (2) and tighten the air cap (3) with light hand force.

NOTE: Stud wall foam kit (249421 only) must be series “B” or later to be compatible with the Fusion PC spray gun. The length of tip packing (2) was increased to improve sealing. If the air cap (3) bottoms out before packing (2) is compressed, replace packing (2).

NOTE: Overtightening may distort the packing inside the mix chamber. Reopen the hole with the 0.94 in. (3/32 in., 2.39 mm) drill bit provided if necessary.

4. Adjust the tip orientation with a standard 5/16 in. nut driver (provided with gun). See FIG. 1.

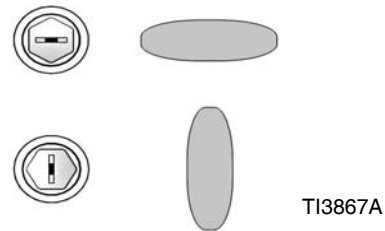


FIG. 1

Cleaning Tips

1. If the pattern begins to shrink or becomes distorted, relieve pressure (see your gun manual) and clean the internal dome of the tip (4) with the tip cleanout tool (15D234). See FIG. 2.
2. Clean out the inside diameter of the packing (2) and the flat mix chamber with a 0.94 in. (3/32 in., 2.39 mm) dia. drill bit (Graco cleanout tool kit 246624).
3. Add a thin layer of lubricant on the outside faces of the air cap (3) to ease cleaning.



FIG. 2

All written and visual data contained in this document reflects the latest product information available at the time of publication. Graco reserves the right to make changes at any time without notice.

Original instructions. This manual contains English. MM 311071

Graco Headquarters: Minneapolis

International Offices: Belgium, China, Japan, Korea

GRACO INC. AND SUBSIDIARIES • P.O. BOX 1441 • MINNEAPOLIS MN 55440-1441 • USA
Copyright 2021, Graco Inc. All Graco manufacturing locations are registered to ISO 9001.